


- Type of installation

Brick pattern:

Start each row alternately with a half (row 1) or full plank (row 2). Each row staggered by half a plank each time, creating a symmetrical pattern.


This is the only laying pattern suitable for laying tiles.

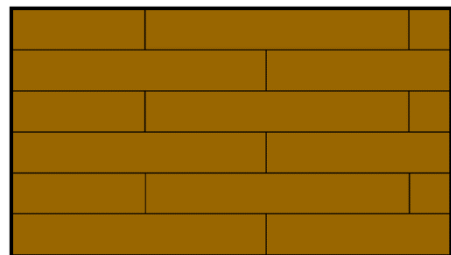

Irregular pattern:

Start row 1 with half a plank, row 2 with a full plank, row 3 with the remainder (min 30cm). Use a piece of a new plank if the remainder of row 1 is shorter than 30 cm.

This creates an asymmetric pattern and little waste.

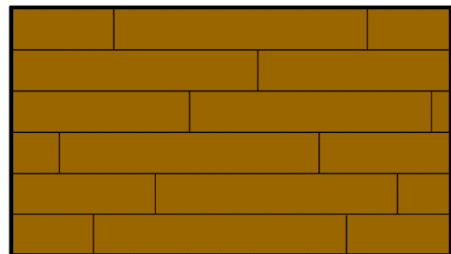

- Prepare floor and install 1st plank

To compensate for floor expansion, place spacers of equal thickness along the full length of the wall (1mm/rm). It is very important that the first row is laid straight. To achieve this, the 1st and 2nd rows are laid alternately. Start by laying a short plank close to the wall in the corner (photo 1, no. 1).

- Install 2nd plank

Take a long plank (photo 1, no. 2). Using the Click4U system, insert the long side of the 2nd plank at a slight angle into the recess of the 1st plank. Push the board downwards, making sure there is no gap between the boards.

- Locking long side 3rd plank

Take another long plank (photo 1, no. 3). Repeat the previous step, inserting the long side of the 3rd plank into the long side of the 2nd plank. Slide plank 3 towards the short side of plank 1 until they are in contact.

- Locking short side 3rd plank (part 1)

Using 3L Triplelock system, press the short side of plank 3 onto the short side of plank 1.

- Locking short side 3rd plank (part 2)

Slap lightly and vertically with the rubber mallet to lock the short sides together. This creates the triple locking.

- Finishing rows 1 and 2

Continue the alternate installation of rows 1 and 2. From the 3rd row onwards, it is no longer necessary to install the flooring alternately. Install one complete row after another. In each case, place the long side at a slight angle in the recess, slide the plank until the short sides touch and lock the short sides.

!!! Make sure each cutted piece is at least 30 cm long and the click edges are not damaged.

-Locking

Remember to use the rubber mallet for triple locking the short sides.

- Complete the installation

Finished? Remove spacers and finish with skirting boards.

*Attention! The expansion joints must not be filled with silicone or other filling and finishing materials.

If necessary, use foam joint fillers so that the expansion joints maintain their function.

- Disassembling the long side

Lift up the entire row in the same angle as you did during installation and separate the rows.

- Disassembling the short side

Slide the short sides flat apart. Warning: do not lift the plank, this will cause damage to the click system.

Recommendations: Measure the room accurately to create a harmonious fit. This will allow you to determine whether the first row should be cut. The first and last rows should not be less than 5cm wide. If the width of the first row does not need to be adjusted, the end should be cut to obtain a clean, smooth edge to the wall.

Important! Remember to keep a few boards with the same batch number for possible repairs.